

Fits: 1992-2008 Road Kings, RoadGlide, StreetGlide, ElectaGlide: Standard, Classic & Ultra.

Read The Instructions Before Starting Installation!

Take your time & do this safely and correctly!

Warning: Improper installation may cause the floorboard to become loose and could cause injury to the motorcycle operator or passenger. Fast Aire is not liable or responsible for any injury or damage to the motorcycle or to the motorcycle operator or passenger due to improper or incorrect installation of the Floorboard Extenders or failure of the installer to follow the installation instructions. It is the installers' responsibility to make sure all fasteners are tightened before operation of the motorcycle. Fast Aire will not warranty components that are lost or fall off because the installer did not tighten them correctly. Periodic maintenance may be required.

Will not work on models equipped with H-D P/N 99002-97 — "Chrome Display Stand"

Parts Included:

- 1 ea 3/4" Spacer Plate with 6 holes
- 3 ea 3/4" OD Round Spacers
- 3 ea 1/2" -13 X 1 3/4" - Grade 8 Allen Head Bolts
- 2 ea 5/16-18 X 1 3/4" - Grade 5 Hex Head Bolts
- 3 ea 1/2" Split Lock Washers
- 2 ea. 5/16" Split Lock Washers

Loctite Medium Strength may be used but is not required

Suggested torque values:

1/2" Grade 8 Allen Bolts, 28-32 ft. lbs

5/16" Grade 5 Hex Head Bolts, 14-19 ft lbs

Refer to your service manual for the correct torque values.

Tools Suggested: 3/8" drive ratchet, extensions, 1/2" socket, 1/2" box wrench, 3/8" allen socket, 3/8" allen wrench

Note: A bike lift or a safe and secure method to hold bike upright without the kickstand. Safety Is Important Here!

Installation Procedure: On some models, electrical wires and/or a brake line may need to be moved a little for access to the bolts. Place the bike on a suitable secure stand or bike lift so the kickstand will not be required.

Right Side

Step 1: Remove the footboard with the mounting brackets as a unit. A 3/8" Allen wrench or Allen socket will be required. Remove the OEM large flat washers from the stock bolts and set them aside as they will be re-used later.

Note: The right side rear bolt can be a pain, take your time.



Step 2: Find two 1/2"-13 x 1 3/4" socket head cap screws and round black spacers from the hardware kit. Place one of the 1/2" I.D. split lock washers & a 1/2" I.D OEM flat washer on each of the new longer Allen bolts.

Insert these bolts where the shorter ones were removed and install one spacer between the frame plate and the floorboard bracket on each of the two bolts.

Step 3: Install the floorboard assembly on the new bolts with the spacers in place. Adjust the height as you desire and tighten securely. Refer to your service manual for correct torque values

Last Step: Go back and recheck the tightness on all the bolts you just installed ... Safety First!

Note: The pictures shown are from a 2007 StreetGlide. Your bike maybe different.

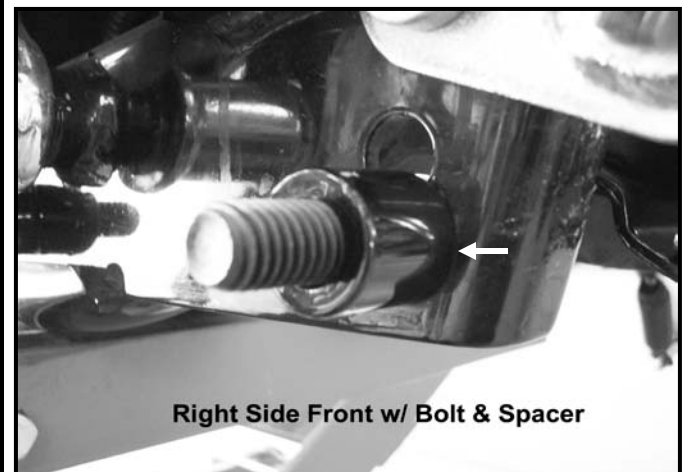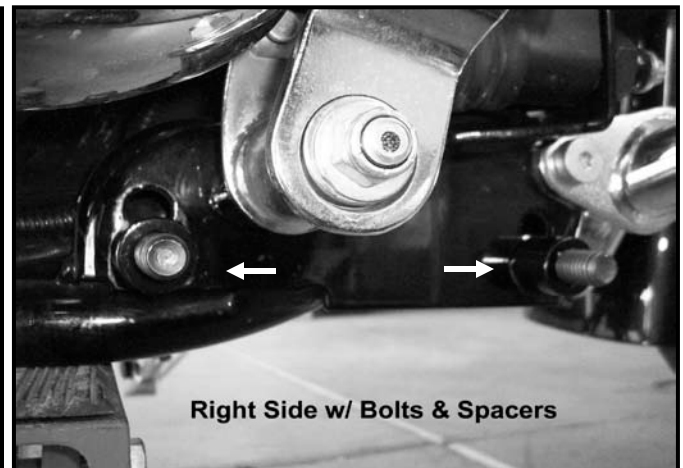

Fits: 1992-2008 Road Kings, RoadGlide, StreetGlide, ElectaGlide: Standard, Classic & Ultra.

Left Side

Note: Check the position of the 5/16" Hex head bolts before removing. Due to model changes and/or modifications over the years, on some models, the 2 ea - 5/16"-18 x 1 3/4" hex heads bolts and split washers may be installed from the outside, the inside or one from each side. Your model may have a nut on the end of one or both bolts

Step 1: Remove the left side footboard assembly with the brackets intact. A 3/8" Allen wrench or Allen socket and a 1/2" socket or 1/2" box wrench will be required. If your model came with nuts on the bolts, save them as they will be re-used.

Step 2: Find 1 ea. 1/2"-13 x 1 3/4" socket head cap screw and round black spacer from the hardware kit. Place one of the 1/2" I.D. split lock washers & a 1/2" I.D OEM flat washer on the new longer Allen bolt. Insert this bolt where the shorter one was removed and install one spacer between the frame plate and the floorboard bracket, on the new longer bolt.


Step 3: Position the six hole spacer plate between the frame plate and the floorboard bracket. Install the 2 new 5/16"-18 X 2" hex head bolts and split lock washers from the kit, install in the correct direction for your motorcycle.

Note: The left side, rear bottom bolt, inserted from the back can be a pain. Take your time.

Step 4: Reinstall the footboard and bracket assembly in the same manner as it was removed. Adjust as desired and tighten all bolts securely. Refer to you service manual for correct torque values.

Last Step: Go back and recheck the tightness on all the bolts you just installed ... Safety First!

Note: The pictures shown are from a 2007 StreetGlide.

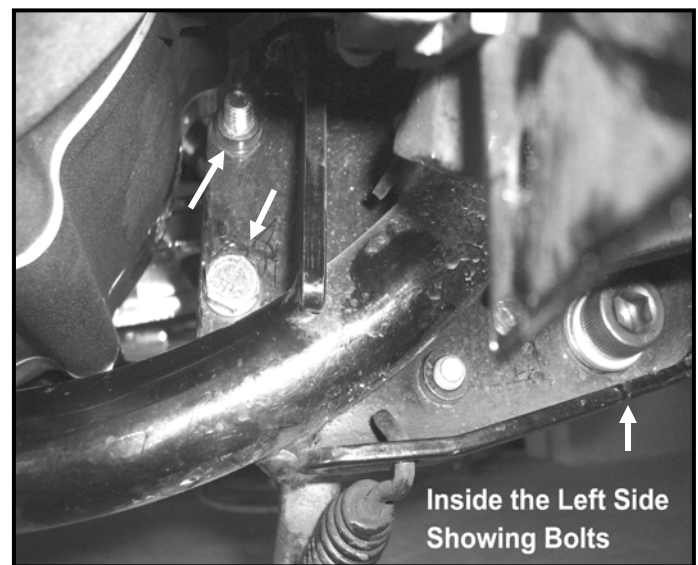

Warranty: Fast Aire warrants that this product is free of manufacturing defects and is as described. If a warranty issue is detected, please contact Fast Aire Immediately.

Refunds: Refunds will be based on an individual bases and may require returning the item to Fast Aire. Fast Aire will be the final authority on all refunds. If you desire a refund, please contact Fast Aire.

Details: On our website there is more information & larger color pictures showing these details.

Go to: www.FastAire.com/extenders.html